




-
-
- CID
- « ->»
- Ademco ContactID
-

" RT1". Ademco Contact ID (DTMF) . ≈30 .

" RT1" .


- " RT1" "XS3", "XS4", "XP1" (WiFi/RS-485);
 - "XT1" " RT1" () ;
 - :
- "123" Ademco ContactID;
 - ;
 - ;
 - Handshake: - 100 , - 100 , - 100 .

. , . , "" GEO.RITM . , - , , -
GEO.RITM (RITM.LINK) SURGARD. .

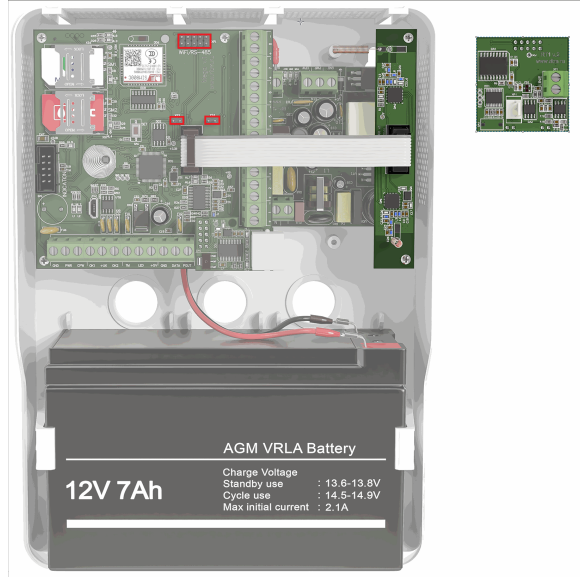


CID

-
-
- " " " " RT1", " " ;
- ;
- ;
- " " ;

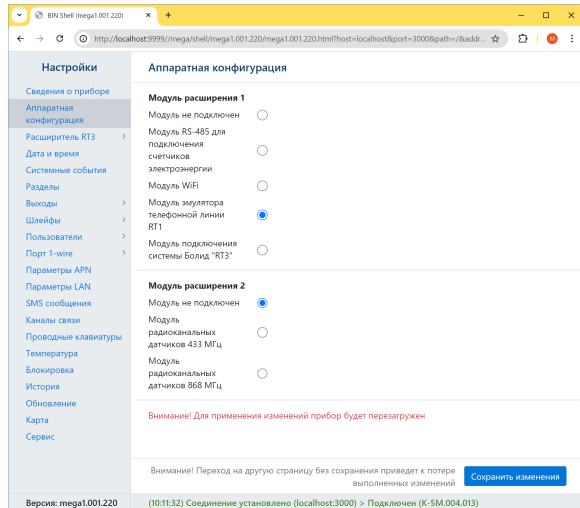

- USB "USB" -;
- " " : -, , «>>» :

 


0
8
0
0
WTrp123

• "";



- "LINE" - "LINE" ();
- "-D1", "+D1", "COM" - -, RS-485 "";
- "-12+" - 12;

	-
LINE	LINE

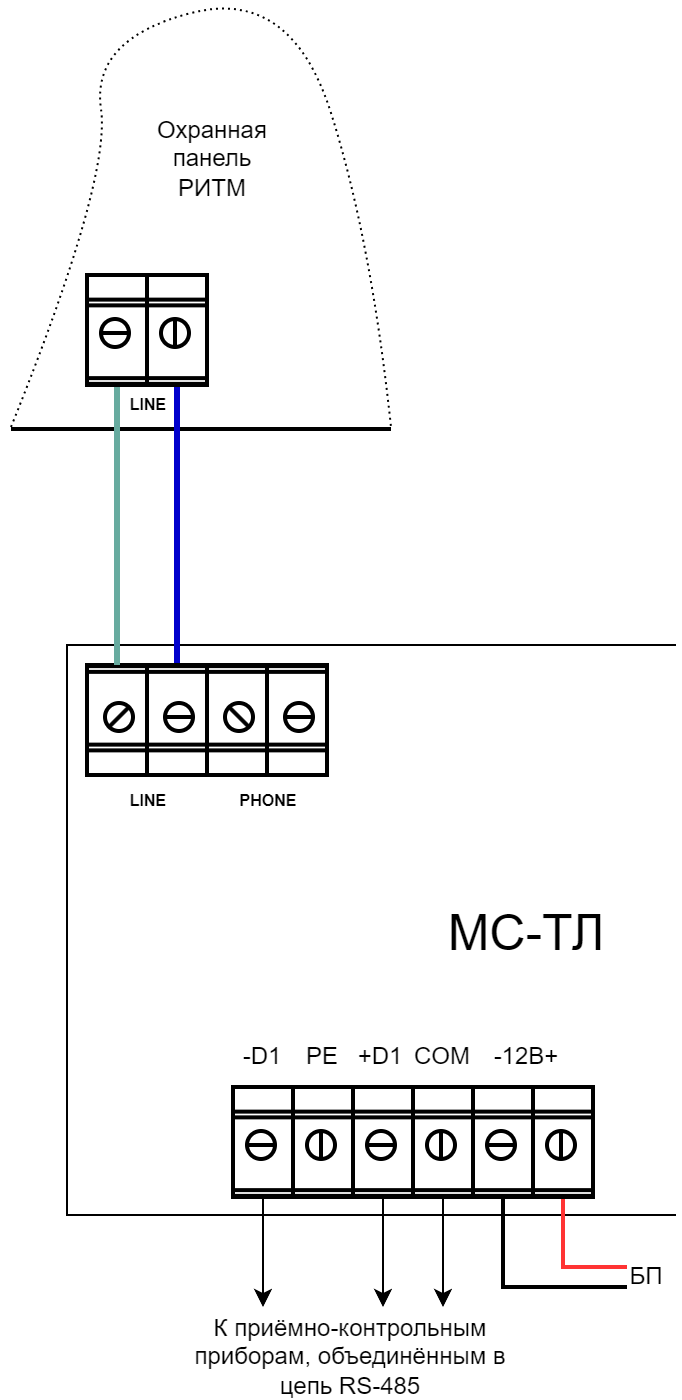


Ademco ContactID

, , ().

1. ;
2. () ;
3. ;
4. ("123");
5. () ;
6. () handshake () - 1400 2300, 100 100;
7. handshake Ademco ContactID - 16 ACCT MT QXYZ GG
CCC S;

Audacity.

- **ACCT** - - (0-9, B-F);
 - **MT** - Ademco ContactID, - 18 98 (18);
 - **Q** - , (1 3)
 - 1 =;
 - 3 =;
 - 6 = .
 - **XYZ** - - ;
 - **GG** - - ;
 - **CCC** - () - ;
 - **S** - - .
8. () , ;
9. () 1,25 **kissoff** () - 1400 750 - 1;
10. , .6;
11. .

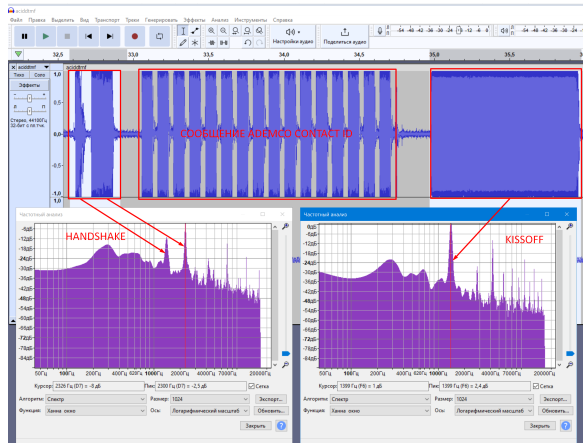


- **Handshake** ()
- **Ademco ContactID**
- **Kissoff** ()
- : , , , handshake , kissoff , kissoff , .



DTMF - . . . :

	, .
	.
	() .
	, .
handshake	Ademco ConatcID handshake: - 100 , - 100 , - 100 . .
16 Ademco ConactID	Ademco ConatcID
	"0" "A". .
kissoff	.


, "XP1" "RT1", () (.). "XP1" "RT1" "GND" "jack 3.5", - "jack 3.5". .

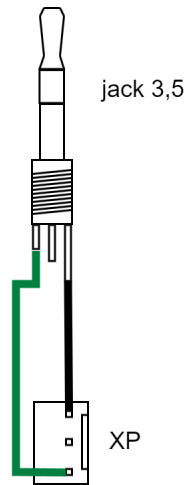

, Windows: "" "" . "" , Audacity. , , "" "" .

Audacity.

	,	,	()
0	941	1336	10
1	697	1209	1
2	697	1336	2
3	697	1477	3
4	770	1209	4
5	770	1336	5
6	770	1477	6
7	852	1209	7
8	852	1336	8
9	852	1477	9
B	941	1209	11
C	941	1477	12
D	697	1633	13
E	770	1633	14
F	852	1633	15

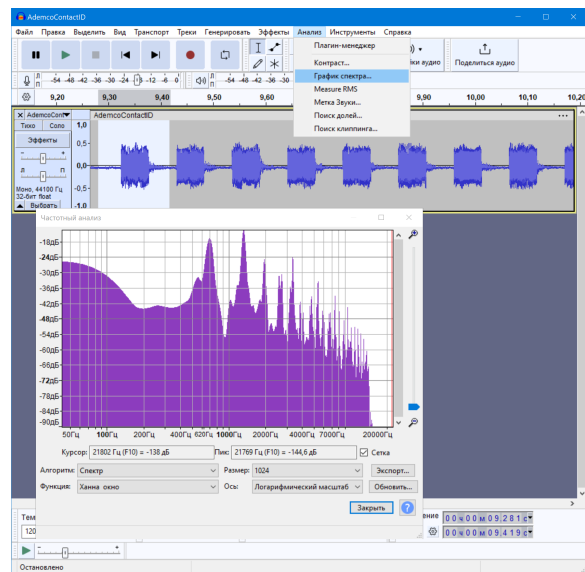

Ademco ContactID .